ACTIVESHOP®

USER MANUAL

Balance Novus 4 Electric Rehabilitation Table for Massage and Physical Therapy



Importer:
ACTIVESHOP SP. Z O.O.
8b Graniczna St., Bldg. DC2A
54-610 Wrocław, Poland
www.activeshop.com.pl
Rev. A/07/2026

Scan for different languages

Thank you for choosing our product.
Please read the user manual before first use and keep it for future reference.

The Balance Novus 4 rehabilitation table with electric height adjustment was designed for physical therapy, rehabilitation, and massage clinics. It is ideal for manual therapies, therapeutic and relaxation massages, and treatments requiring precise positioning of the client. Its stable construction, intuitive operation, and functional features support the comfort of a specialist's daily work. The modern
design, featuring a distinctive, contoured base, gives the unit a light, elegant look that blends perfectly with the furnishings of professional clinics.

Technical Specifications	
Upholstery material	Synthetic leather
Maximum weight capacity	200 kg
Number of actuators	1

Device design

1. Headrest
2. Headrest cover
3. Armrests
4. Remote Control
5. Foot-operated height adjustment
6. Towel holder



Headrest adjustment

There is a metal lever just below the headrest. Gently pull it upward, then manually adjust the headrest to the optimal angle. Once you've set the position, release the lever to lock the mechanism in place.




Armrest adjustment

There is a metal rod with a locking knob under the armrest.
To adjust the position, loosen the knob, set the armrest to the desired height, and then tighten the knob firmly to securely lock it in place.



Remote Control Functions

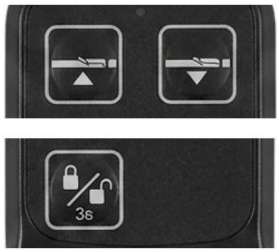

Height Adjustment

Lock

For added convenience, the remote control can be hung on a hook by the tabletop, preventing it from getting in the way while you work.

Foot-operated height adjustment

Press the metal bracket located at the bottom of the bed with your foot, then gently slide it horizontally (parallel to the floor) forward or backward to set your preferred tabletop height. This can be done from either side of the table.




Towel hook

A practical holder located near the footrest allows you to conveniently hang a towel.



Device dimensions

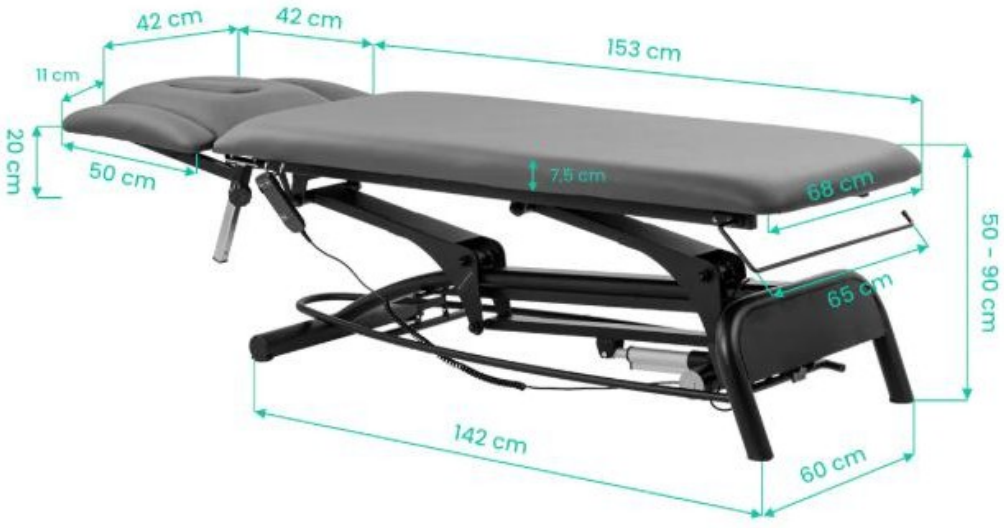

Dimensions of the headrest cover: 22.5 x 11.5 cm. The
table's maximum load capacity is 200 kg.

Recommendations

1. Make sure you install the unit on a flat, stable surface to reduce the risk of it falling over and being damaged.
2. Never leave the unit plugged in and unattended.
3. Use the device as intended, as described in the manual.
4. Never use this device if the cord or plug is damaged.
5. Do not use the device if it is not working properly or if it has been dropped, damaged, or submerged in water.
6. Do not pull directly on the cord to unplug the device from the outlet.
7. This product is for indoor use only. Do not expose it to direct weather conditions.
8. Clean the device periodically to prevent dirt buildup. It is best to clean the device with a damp cloth.
9. Do not wrap the power cord around the device.

Safety Precautions

1. This device is professional equipment intended for use in beauty salons. Operation of the device exclusively by qualified beauty professionals helps prevent adverse effects during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those specified in this user manual. All maintenance and repairs must be performed exclusively by an authorized service technician (ACTIVESHOP Sp. z o.o.).
3. Do not install or operate the device near liquids, in wet areas, or with wet hands. Ensure that no liquids enter the device.
4. Immediately unplug the device from the outlet and contact the authorized service center provided by ACTIVESHOP Sp. z o.o. in the following cases: a) liquid has entered the device,
   b) the device emits a strange odor, smoke, or makes unusual noises, c) the power cord has been damaged, d) the device has been knocked over or its housing has been damaged.
5. Do not place any objects on the cables. Do not install the device in locations where someone might step on the power cord.
6. For safety reasons, unplug the power cord from the outlet after each use of the device.
7. Do not place any foreign objects inside the device. If a foreign object gets inside, unplug the power cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf, or vehicle. If it falls, the device may be damaged.
9. To ensure the device's specified service life, it is recommended to wait one minute before pressing the power button again (between turning it on and off
   and vice versa).
10. The power supply must comply with the specifications listed on the nameplate. Otherwise, there is a risk of the device malfunctioning, being damaged, or even catching fire.

CAUTION

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center—this will help prevent danger.
2. This device may be used by children aged 8 and older, by persons
   with reduced physical or mental capabilities, as well as by persons unfamiliar with the operation of this equipment, provided they are given appropriate supervision or instruction on

proper and safe use and the associated risks are understood.

3. Do not leave the device unattended when children or people who lack sufficient knowledge of how to use the device are nearby.
4. This device is not intended for use by children as a toy. Do not allow children to play with the device.
5. This electrical device is not a toy. Improper use of or contact with the may pose a risk of injury or death; therefore, the device must be used and stored out of the reach of children.

Disposal of the device



To protect the environment, in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, used electrical devices must be collected separately and taken to collection points for waste electrical and electronic equipment. Follow the guidelines for disposing of this type of equipment and do not dispose of it in household waste bins.

At the end of their useful life, these devices still contain valuable components suitable for recycling; therefore, they should be sent for recycling to appropriate collection points or to ACTIVESHOP Sp. z o.o.

Storage and Transport

The device should be transported at temperatures ranging from (–)20°C to (+)40°C exclusively in its original packaging. Store it in a well-ventilated room with a relative humidity of no more than 90%. Operating temperature range: from (+)10°C to (+)40°C. During storage and transport, the device must not be thrown or dropped, nor should it be exposed to mechanical shocks or the elements.