ACTIVESHOP®

USER MANUAL

Sakura Maximus 809 3D Massage Chair



Importer:
ACTIVESHOP SP. Z O.O.
8b Graniczna St., Bldg. DC2A
54-610 Wrocław, Poland
www.activeshop.com.pl
Rev. A/03/2026

Scan for different languages


Thank you for choosing our product.

Please read the user manual before first use and keep it for future reference.

The Sakura Maximus 809 massage chair with advanced 3D massage provides comprehensive relaxation and high comfort. Its well-designed features deliver an intense, relaxing massage. An intelligent body detection system, 3D technology, precision massage heads, and an airbag system work together to effectively loosen muscles, promote deep relaxation, and restore calm. The perfect solution for both active individuals and those who spend many hours sitting, offering a daily dose of relaxation at the highest level.

Technical specifications:	
Input voltage	230V
Power frequency	50 Hz
Power	100W
Maximum load	< 150 kg
Upholstery	Faux leather
Chair weight	87.5 kg


Device description:

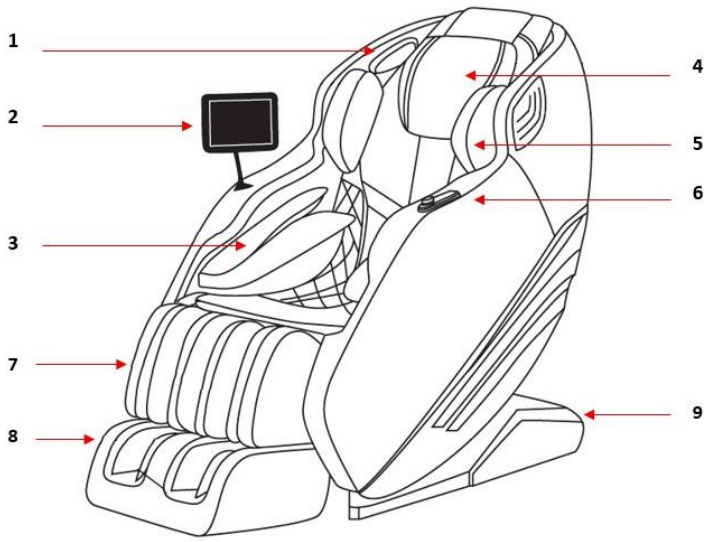


1. Speakers
2. Touch control panel
3. Forearm airbags
4. Headrest
5. Shoulder airbags
6. Handheld control panel and USB port
7. Leg airbags
8. Foot airbags and massage rollers
9. On/Off button (0/I)

Installation


1. The power cord input jack on the chair is located at the very bottom of the backrest, near the floor.
2. Plug the power cord into a grounded outlet.
3. After connecting to the power supply, set the main power switch to the "I" position (see item 9 in the photo)

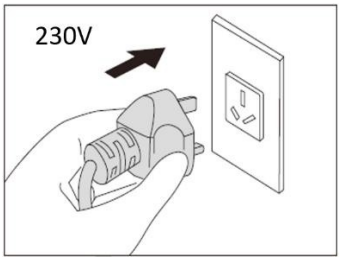

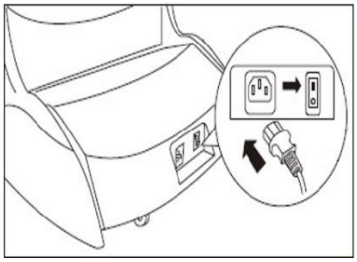

Note

During operation, the chair changes its position by tilting the backrest backward and raising the footrest. Therefore, position it at a sufficient distance from the wall and objects in front so that nothing blocks the chair's movements.

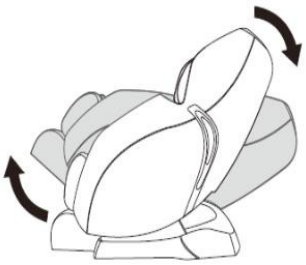

User Manual

1. Sit comfortably in the chair. Place your feet and calves in the designated area, and if it seems too short, gently push down with your legs to lower the mechanism. Once you lift your legs up, the mechanism will return to its original position.
2. Rest your head against the headrest and make sure your entire back is against the seatback.
3. Press the "⏻" button on the touch panel or handheld device.

The built-in body detection system will automatically measure the user's height and weight to properly adjust the width of the massage rollers and select the appropriate pressure. At this point, your back and head should rest loosely against the backrest and be in contact with it so that the device can accurately detect the position of your shoulder girdle and hips.



Countdown showing how many seconds remain until the body scan is complete

The ▲, ▼ arrows allow you to manually adjust the position of the massage rollers (the automatically increases)

The scan takes a few seconds. If you have any concerns about the measurement, you can adjust the automatically generated value to the desired level using the ▲ and ▼ arrows, but only until the scan is complete (while the screen shown in the photo above is still displayed). After that, adjustments can only be made by restarting the device.

Once the body scan is complete, the chair will begin massaging your body in automatic mode.

Note

1. Before starting the massage, make sure there are no foreign objects between the chair's crevices.
2. Please do not start the massage mode if no one is sitting in the chair.
3. If the screen turns off, gently touch the touch panel to wake it up.

Recommendations before the massage

1. Remove all jewelry (earrings, necklaces, bracelets, rings).
2. Emptying the pockets in your pants and sweatshirt.
3. Remove footwear.

Two control panels are available to the user: a touch panel under the right hand and manual controls under the left.

Touchscreen

The touchscreen LCD panel provides instant access to the chair's programs and settings. For added convenience, you can place it in the holder on the right armrest or hold it in your hands. The holder must be screwed in to ensure stability.



Main tabs

1. Main Menu
2. Automatic mode with a choice of 10 massage types
3. Manual mode for customizing massage settings
4. Chair position adjustment
5. General settings
6. Air cushions

Additional buttons

7. On / Off
8. Pause

AUTO MODE

Auto Mode starts automatically after scanning your body. In this mode, 10 massage types are available: Master, Sleep, Neck, Thai, Back, Strong, Elder, Queen, Relax, Motion. To select a mode, press the button marked with the number 1 in the photo below.



The massage technique and pressure of the massage rollers are preset here, but the user can still adjust the basic parameters (points 4–10 in the photo below).





1. Selecting a massage mode
2. Time remaining until the end of the active massage
3. Active parameters indicator
   Note: You cannot change these settings here. The procedure for changing these parameters will be described later in this manual
4. Air cushions
5. Foot massage rollers
6. Zero gravity (the chair reclines backward like a cradle – to a semi-reclined position)
7. Heating of the middle back and calves
8. Adjust session duration in increments of 5, 10, 15, 20, 25, or 30 minutes
9. Bluetooth functionality
10. LED strips

On/off buttons

Selectable massages in automatic mode

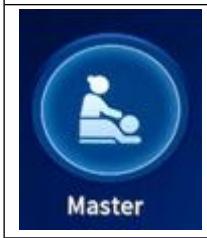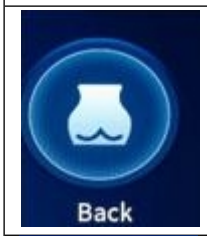Name	Features	Intended Use
	The built-in intelligent system automatically analyzes height, weight, and the shoulder-neck point, then selects the optimal massage strength and techniques, ensuring a fully personalized experience.	Ideal for first-time users and those who aren't sure which massage mode to choose.
	Gentle kneading, low-frequency vibrations, and a heating function combined in a slow, soothing rhythm that helps calm the body.	Helps you fall asleep, induces a state of deep relaxation, and reduces stress and tension.
	Focused on the cervical spine of the spine, the trapezius muscles, and the upper back. It uses pressure points, deep kneading, and pushing motions to release tension.	For people experiencing stiffness and pain in the neck and shoulders, especially after prolonged sitting or working at a computer or on the phone.
	Inspired by classic Thai massage—air cushion pressure and controlled stretching of the guide rails support muscle and ligament flexibility and increase joint range of motion.	Deep relaxation of the entire body and improved mobility.
	Focus on the lumbar region and hip muscles. Deep shiatsu pressure, rolling movements, and soothing heat help reduce fatigue and stiffness in the lower back.	Recommended after a long day of standing or walking, and for tension in the lower back and hips.
	Enhanced massage intensity thanks to powerful pulses, deep kneading of pressure points, and high-frequency vibrations targeting deep muscle tissues.	Recommended after intense workouts and in cases of severe fatigue and muscle strain.
	Gentle, slow, and even movements, plus a heating function. Focused on the neck, shoulders, lower back, and legs.	Ideal for seniors and those needing a gentle, soothing massage every day.

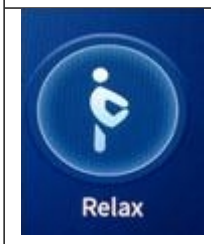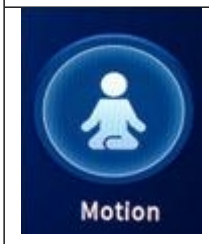	A combination of gentle kneading, airbag pressure, and mild low-frequency vibrations that support circulation, skin tone, and the reduction of swelling.	For relaxation, body contouring, reducing leg swelling, and improving skin firmness.
	Gentle kneading, subtle stroking, and pleasant warmth in a slow, harmonious rhythm.	Light relaxation during the day and quick recovery when feeling tired.
	Activates deep muscle layers by combining a more intense massage, pressure from air cushions, and soothing warmth, supporting the body's recovery.	Ideal after a workout, running, or intense physical activity for quick recovery

Each of the above massages lasts 20 minutes by default. You can extend or shorten this time by clicking .

MANUAL MODE



The program allows you to manually adjust parameters such as:

1. Massage technique selection – there are 20 different combinations available, combining: Kneading (Knead), Tapping (Knock), Pounding (Tap), WN (massage rollers operate in wide-narrow mode),

Shiatsu, WM (massage rollers operate in wide-to-medium mode), MN (massage rollers operate in medium-to-narrow mode), WNF (massage rollers operate in wide-to-narrow and alternating modes)

2. Selecting the area of the back to massage—options include: a specific point, an up-and-down motion across the entire back, the entire back at once, or the lumbar region. Use the ▲ and ▼ arrows to select a specific point**.**
3. Massage roller width setting – distance from the spine. Options: away from the spine, toward the spine, or alternating
4. Air cushions: on the shoulders, forearms, and calves/feet
5. Massage roller pressure – adjustable from 1 to 3
6. Massage speed – adjustable from 1 to 3

Note
You can also configure individual settings for the pressure of the massage rollers in automatic mode. If the massage feels too intense, go to the tab: Manual -> Roller
and adjust the settings as you see fit.

POS – seat position adjustment

Note: The adjustment functions described below are available only in manual massage mode.



Adjustment options

1. Backrest (up/down) – press and hold the corresponding button to adjust the backrest angle.
2. Footrest (up/down) – press and hold to adjust the height of the footrest
3. Zero gravity – select level 1, 2, or 3. The chair will automatically recline to the optimal semi-reclined position (relieving pressure on the spine).

SETUP - SETTINGS

- Language selection – English or Chinese
- Bluetooth function – open (active), close (inactive)
- AI function – open (active), close (inactive)

- Charge function – applies to the USB port located on the outside of the manual control panel – open (active) or close (inactive)
- Heat (heating function) – open (active), close (inactive)
- Version – software version information
- Luminance – option to select touchscreen brightness, adjustable from 1 to 5
- Key Tone – button sound – open (active), close (inactive)

AIRBAGS



1. Airbag intensity adjustment – range from 1 to 3
2. Foot massage roller intensity adjustment – range from 0 to 3
3. Heating – on/off
4. Select which airbags to activate

<u>Control panel</u>

The user also has access to a side panel located on the left armrest.

1. Main knob:
   Press – on / off
   Turn left and hold – the chair reclines into a zero-gravity position Turn right and hold – the chair returns to the sitting position
2. Timing – adjust the massage duration; choose from: 5 min, 10 min, 15 min, 20 min, 25 min, or 30 min.
3. Auto mode – each click cycles through the massage modes, just like the Auto option on the touch panel
4. Foot massage rollers – each click changes the intensity from 0 to 3
5. Zero gravity – on/off

6. Manual mode – each click switches to the next massage mode, just like the Manual option on the touch panel
7. Heating – on/off



The chair has Bluetooth functionality—you can pair it with your phone and play your favorite music. Search for the name “809” and click Connect on your phone. The music continues playing after the massage ends until you turn it off.
The speakers are located on both sides of the headrest.

Voice control (AI feature)

The Sakura 809 massage chair features voice control. Activate the option by tapping the icon on the home screen or in the Setup tab, then say the wake-up command “Hi massage chair.” You’ll hear an activation sound and the word “Hi” in response—now you can say one of the following voice commands.

> Important: Voice control only works with commands spoken in English. For best results, we recommend speaking slowly, clearly, and loudly.

The full list is provided below and on the sticker located on the back of the touch panel.

No.	Voice command	Seat response	No.	Voice command	Chair response
1	HI MASSAGE CHAIR	HI	13	INCREASE AIR	OK
2	START MASSAGE	OK	14	REDUCE AIR	OK
3	END MASSAGE	OK	15	START FOOT	OK
4	INCREASE MASSAGE	OK	16	END FOOT	OK
5	REDUCE MASSAGE	OK	17	BACK RISE	OK
6	START MODE ONE	OK	18	BACK DOWN	OK
7	START MODE TWO	OK	19	BACK STOP	OK
8	START MODE THREE	OK	20	START AIR	OK
9	START MODE FOUR	OK	21	END AIR	OK
10	START MODE FIVE	OK	22	START ZERO	OK
11	START HEAT	OK	23	END ZERO	OK
12	END HEAT	OK			

If the chair does not respond to voice commands, repeat the start command “Hi massage chair” to wake the function from sleep mode.

Translation of the above voice commands:

1. Hello massage chair
2. Start massage
3. End massage
4. Increase massage
5. Decrease massage
6. Turn on Mode 1 - Master
7. Turn on Mode 2 - Sleep
8. Turn on Mode 3 - Neck
9. Turn on Mode 4 - Thai
10. Turn on Mode 5 - Back
11. Start heating
12. End preheating
13. Increase air cushions
14. Decrease air cushions
15. Start foot massage
16. End foot massage
17. Backrest up
18. Backrest down
19. Seatback down
20. Activate the airbags
21. Turn off the air cushions
22. Activate zero gravity
23. Turn off zero gravity

Product dimensions



Health Contraindications

This chair is not intended for use by: people with osteoporosis, heart disease, or a pacemaker; people with a high fever; pregnant women or women who are menstruating; people who have suffered physical or psychological trauma.

We recommend consulting a doctor before using this massage chair:

1. People with acute lower back pain, a herniated disc, or lumbar displacement.
2. People suffering from arthritis.
3. People with muscle atrophy due to age or a petite/slender build.
4. People prone to sprains or with bone problems.
5. People who suffer from severe motion sickness.
6. People who have recently undergone surgery.
7. People with skin conditions, such as rashes, redness, or other issues.

Warning

- This product is intended for indoor use.
- Before using this massage chair, check to make sure the cover (the fabric on the back panel within the range of motion of the massage wheel or other parts) is not damaged, torn, or frayed. Using the chair with damaged fabric may result in injury or electric shock.



- Before getting up from the chair, be sure to stop the massage mechanism first; failure to follow this rule may damage the device.
- Make sure there are no other objects on the seat during the massage, as they may fall into the gaps between moving parts and cause damage.
- The optimal massage duration for one person is 20–30 minutes. Do not fall asleep while using this device; a massage that is too long is not recommended.
- Do not use the "waist-warming" massage function for an extended period of time. If you feel any discomfort, turn off this function.
- If you feel any discomfort while using this device, stop using it immediately and consult a doctor.
- Do not use this device within one hour after eating.
- If your body has sustained significant injuries, do not set the device to maximum intensity.
- Do not operate the device with wet hands or while wearing wet clothing.
- The chair should only be plugged into a grounded outlet.
- Use only the power supply provided with the chair.
- After each use, set the main power switch to the “0” position and unplug it from the wall outlet.
- Do not stand or sit on the rear cover or armrest, as this may cause the unit to tip over and result in injury.
- Do not use in environments with high humidity (such as a bathroom) or with high levels of dust or corrosive gases.
- It is not recommended to place the device in narrow spaces or poorly ventilated areas.
- Do not cover the device’s heat sink with anything.
- In the event of a power failure, turn off the device and disconnect the power source.
- Do not use this chair on heating devices, such as an electric blanket.
- Do not move the chair while someone is sitting in it.
- Do not put your hands, fingers, feet, or head in the gap between the lower leg and the seat or the armrest. Do not place your hands, arms, or head between the backrest and the rear cover. Do not place animals on the chair (seat, backrest, armrest, leg, etc.).


Moving

1. Turn off the device and make sure the backrest and footrest have returned to their original (seated) positions. Set the chair's main power switch to the "0" position. Unplug the power cord from the outlet.
2. Crouch down and grasp the bottom of the chair base on both sides, then lift it slightly.
3. Slide your hand under the base to feel the metal frame of the chair and grasp it.
   Be careful not to grab the plastic cover (trim) located on the outer sides of the seat frame.
4. Move and position the unit in the desired location on the floor.

Caution
Move the device slowly and be careful not to pinch your feet. Releasing the footrest suddenly will cause it to return to its original position and may hit the floor and damage it. It is therefore recommended to place an additional protective layer.

Another way to move the chair is to use the special wheels built into the rear of the base.

1. Turn off the device and make sure the backrest and footrest have returned to their original (seated) positions. Set the chair's main power switch to the "0" position. Unplug the power cord from the outlet.
2. Standing behind the chair, tilt it back approximately 45° (toward you). Move the chair to the desired location.

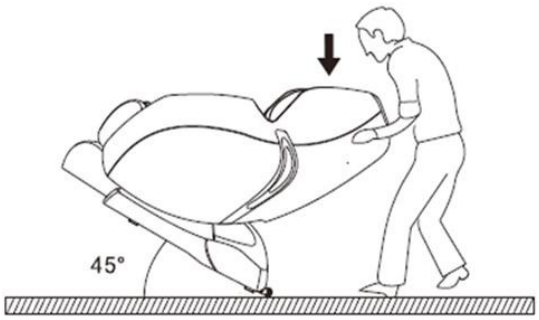

Proceed with caution; tipping the chair over may damage it. It is also recommended to protect the floor along the path where the chair will be moved to avoid scratching the floor.

Note
Do not pull or push the unit when it is not installed. Do not hold the side panel or any plastic parts outside the seat frame when moving the unit. Doing so may result in malfunction or personal injury. Do not move the unit while people are sitting on it. Doing so may result in an accident.


Cleaning and Maintenance


To keep the chair in good working order, ensure its long service life, and maintain proper operation of the device, we recommend regular maintenance and adherence to the following cleaning guidelines.

Note: Before performing any work, always turn off the device using the main switch and unplug it from the outlet.

- Cleaning leather surfaces:
  Wipe the leather with a soft, dry, or slightly damp cloth. Do not use strong detergents such as solvents, gasoline, or alcohol-based products. You may use commercially available synthetic leather care products and follow the instructions on their packaging.
  Let the seat upholstery dry naturally. Do not use blow dryers to dry

the surface. Do not use denim or colored fabrics to wipe the device, so that their dye does not transfer to the seat surface.

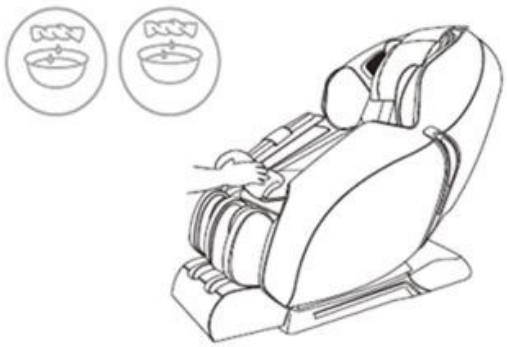

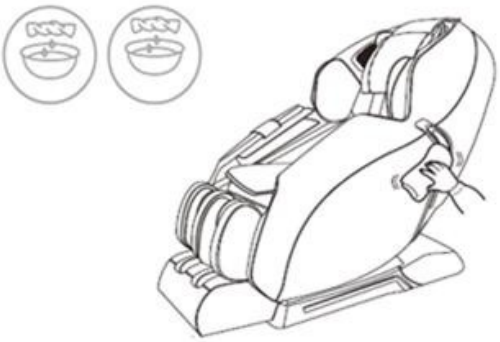

- Cleaning plastic surfaces
  Wipe plastic surfaces with a soft, dry, or slightly damp cloth. Do not use strong detergents such as solvents, gasoline, and alcohol-based products. You may use commercially available artificial leather care products and follow the instructions on their packaging.
- Clean the touch panel with a dry or slightly damp cloth, taking care not to let excess water get inside.

Recommendations

1. Make sure you place the device on a flat, stable surface to reduce the risk of it falling and getting damaged.
2. Never leave the device plugged in and unattended.
3. Use the device as intended, as described in the manual.
4. Never use this device if the cord or plug is damaged.
5. Do not use the device if it is not working properly or if it has been dropped, damaged, or has come into contact with water.
6. Do not pull directly on the cord to remove the plug from the outlet.
7. This product is for indoor use only. Do not expose it to direct weather conditions.
8. Clean the device periodically to prevent dirt buildup. It is best to clean the device with a damp cloth.
9. Do not wrap the power cord around the device.

Safety Precautions

1. This device is professional equipment intended for use in beauty salons. Use of the device exclusively by qualified beauty professionals helps prevent adverse effects during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those specified in this user manual. All maintenance and repairs must be performed exclusively by an authorized service technician (ACTIVESHOP Sp. z o.o.).
3. Do not install or operate the device near liquids, in wet areas, or with wet hands. Ensure that no liquids enter the device.
4. Immediately unplug the device from the outlet and contact the authorized service provided by ACTIVESHOP Sp. z o.o. in the following cases: a) liquid has entered the device,
   b) the device emits a strange odor, smoke, or makes unusual noises, c) the power cord has been

damaged, d) the device has been knocked over or its housing has been damaged.

5. Do not place any objects on the cables. Do not install the device in locations where someone might step on the power cord.
6. For safety reasons, unplug the power cord from the outlet after each use of the device.
7. Do not place foreign objects inside the device. If a foreign object gets inside, unplug the power cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf, or vehicle. If it falls, the device may be damaged.
9. To ensure the device's specified service life, it is recommended to wait one minute before pressing the power button again (between turning it on and off and vice versa).
10. The power supply must comply with the specifications listed on the nameplate. Otherwise, there is a risk of the device malfunctioning, being damaged, or even catching fire.

CAUTION

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center— this will help prevent hazards.
2. This device may be used by children aged 8 years and older, by persons by individuals with reduced physical or mental capabilities, as well as by those unfamiliar with the operation of this equipment, provided they are given appropriate supervision or instruction on how to use it safely and understand the associated risks.
3. Do not leave the device unattended when children or persons without sufficient knowledge of how to use the device are in the vicinity.
4. The device is not intended for use by children. Do not allow children to play with the device.
5. This electrical device is not a toy. Improper use of or contact with the can pose a risk of injury or death; therefore, the device must be used and stored out of the reach of children.

Disposal of the device



To protect the environment, in accordance with Directive 2012/19/EU on waste electrical and electronic equipment, used electrical equipment must be collected separately and taken to collection points for waste electrical and electronic equipment. Follow the guidelines for disposing of this type of equipment and do not dispose of it in household waste bins.

At the end of their useful life, these devices still contain valuable components suitable for recycling; therefore, they should be sent for recycling to appropriate collection points or to ACTIVESHOP Sp. z o.o.

Storage and Transport

The device should be transported at temperatures ranging from (–)20°C to (+)40°C exclusively in its original packaging. It should be stored in a well-ventilated room with relative humidity not exceeding 90%. Operating temperature range: (+)10°C to (+)40°C. During processes
During storage and transport, do not throw or drop the device, or expose it to mechanical shocks or weather conditions.